

## **IMPORTANT BIOMETRIC LOCK INSTRUCTIONS - READ THIS FIRST**

Thank you for ordering your Jewelry Safe with the Amsec Biometric Lock. To open your safe for the first time

Press "Code", then enter 1 2 3 4 5 6 7 8 9 0

Turn the handle to open the safe

The lock instructions booklet is inside your safe. Please open the safe per the instructions above and refer to the Biometric Lock Instructions Booklet.

**NOTE:** Most of our Jewelry Safe customers prefer to open their safe simply by placing their finger on the fingerprint reader. They do not want to be forced to use BOTH fingerprint AND 10-digit user code. Therefore, your first action with the lock should be to change the security classification to Level 3 – this allows you to use EITHER your fingerprint OR your unique 10-digital code to open the safe.

Turn to section 12 on page 12 for instructions on how to change security level.

Section 15 on page 14 deals with enrolling your fingerprint.

Section 17 on page 15 instructs you how to initiate your unique 10-digit code that you can use instead of your fingerprint should you desire to do so. This code should be changed from the default 1234567890 after you enroll your fingerprint.

You will notice soon that the instructions on the lock "time out" quickly. If the lock "times out" before you finish your action you must start over again. It is my experience that after a few attempts you will become familiar with the "flow" and be able to accomplish your goal. If you need assistance please feel free to give me a call and I'll attempt to walk you through the process. Thank you again for selecting Maximum Security as your safe supplier.